# **SERVICE & OPERATING MANUAL**

**ORIGINAL INSTRUCTIONS** 


**E2** 

### 2" Elima-Matic Bolted Metal - ATEX

with Metal Center Section

### **E2 Metal Pumps**

- Stainless Steel
- Cast Iron
- Hastelloy

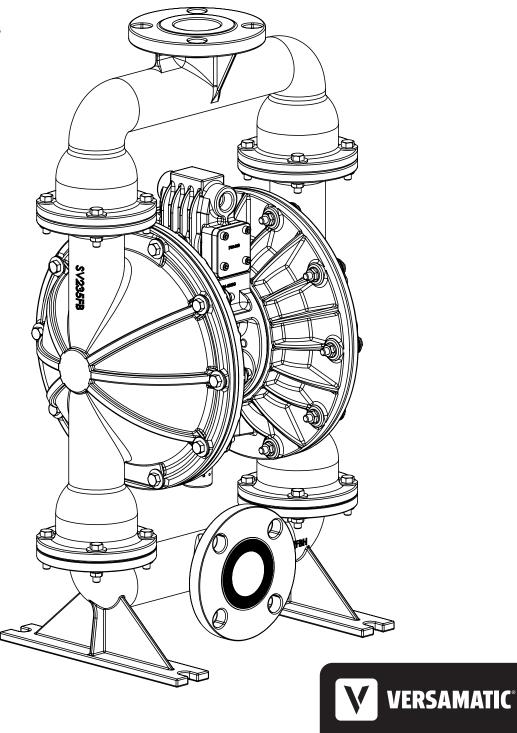

### **Safety Information**

#### **A** IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

#### **A** CAUTION



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Plastic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.



#### **WARNING**

Pump not designed, tested or certified to be powered by compressed natural gas. Powering the pump with natural gas will void the warranty.



#### **WARNING**

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

#### WARNING



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.



This pump is pressurized internally with air pressure during operation. Make certain that all fasteners and piping connections are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

# **ATEX Pumps - Conditions For Safe Use**

- 1. Ambient temperature range is as specified in tables 1 & 2 on the next page
- 2. ATEX compliant pumps are suitable for use in explosive atmospheres when the equipment is properly grounded in accordance with local electrical codes
- 3. Conductive Polypropylene, conductive Acetal or conductive PVDF pumps are not to be installed in applications where the pumps may be subjected to oil, greases and hydraulic liquids.
- 4. When operating pumps equipped with non-conductive diaphragms that exceed the maximum permissible projected area, as defined in EN ISO 80079-36: 2016 section 6.7.5 table 8, the following protection methods must be applied
  - Equipment is always used to transfer electrically conductive fluids or
  - Explosive environment is prevented from entering the internal portions of the pump, i.e. dry running.



## **Temperature Tables**

**Table 1. Category 2 ATEX Rated Pumps** 

Ambient Temperature	Process Temperature	Temperature	Maximum Surface
Range [°C]	Range [°C]	Class	Temperature [°C]
	-40°C to +80°C	T5	T100°C
	-40°C to +108°C	T4	T135°C
-20°C to +60°C	-40°C to + 160°C	Т3	
	-40°C to +177°C	(225°C) T2	T200°C

Table 2. Category M2 ATEX Rated Pumps for Mining

Ambient Temperature	Process Temperature
Range [°C]	Range [°C]
-20°C to +60°C	-40°C to +150°C

<u>Note:</u> The ambient temperature range and the process temperature range should not exceed the operating temperature range of the applied plastic parts as listed in the manuals of the pumps.

WWW.VERSAMATIC.COM Model E2 Bolted Metal • 2

### **Table of Contents**

### SECTION 1: PUMP SPECIFICATIONS......1

- Nomenclature
- Performance
- Materials
- Dimensional Drawings

#### **SECTION 2: INSTALLATION & OPERATION .10**

- Principle of Pump Operation
- Typical Installation Guide
- Troubleshooting

#### SECTION 3: EXPLODED VIEW.....13


- Composite Drawings
- Parts List
- Materials Code

#### **SECTION 4: WARRANTY & CERTIFICATES..18**

- Warranty
- EU Declaration of Conformity Machinery Directive
- EU Declaration of Conformity ATEX Directive

### **Explanation of Pump Nomenclature**

Your Serial #: (fill in from pump nameplate)

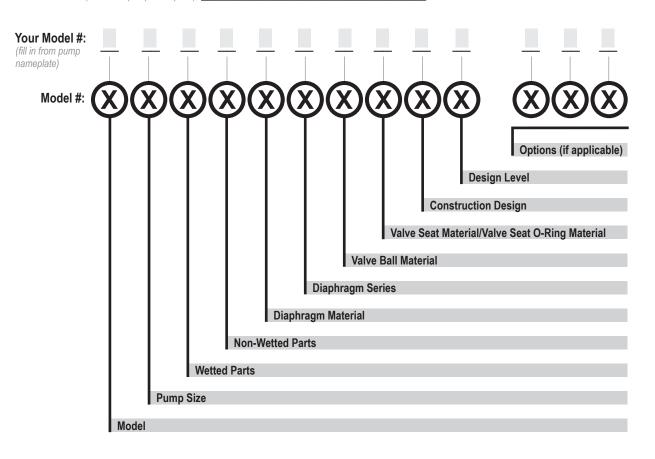

Model	Pump Size	Wetted Parts	Non-Wetted Parts	Diaphragm Material
E Elima-Matic	6 1/4"	<b>A</b> Aluminum	<b>A</b> Aluminum	1 Neoprene
<b>U</b> Ultra-Matic	<b>8</b> 3/8"	C Cast Iron	S Stainless Steel	2 Nitrile (Nitrile)
V V-Series	<b>5</b> 1/2"	S Stainless Steel	P Polypropylene	3 FKM (Fluorocarbon)
	7 3/4"	<b>H</b> Alloy C	<b>G</b> Groundable Acetal	4 EPDM
	<b>1</b> 1"	P Polypropylene	Z PTFE-coated Aluminum	<b>5</b> PTFE
	<b>4</b> 1-1/4" or 1-1/2"	<b>K</b> Kynar	J Nickel-plated Aluminum	6 Santoprene XL
	<b>2</b> 2"	G Groundable Acetal	C Cast Iron	7 Hytrel
	<b>3</b> 3"	B Aluminum (screen mount)	Q Epoxy-Coated Aluminum	Y FDA Santoprene

R Rugged **D** Dome X Thermo-Matic T Tef-Matic (2-piece) B Versa-Tuff (1-piece) F FUSION (one-piece integrated plate)

1 Neoprene 2 Nitrile 3 (FKM) Fluorocarbon 4 EPDM 5 PTFE 6 Santoprene XL 7 Hytrel 8 Polyurethane A Acetal S Stainless Steel Y FDA Santoprene

#### Valve Ball Material Valve Seat/Valve Seat O-Ring Material 1 Neoprene

2 Nitrile 3 (FKM) Fluorocarbon 4 EPDM **5** PTFE 6 Santoprene XL 7 Hytrel 8 Polyurethane

A Aluminum w/ PTFE O-Rings Stainless Steel w/ PTFE O-Rings C Carbon Steel w/ PTFE O-Rings H Alloy C w/ PTFE O-Rings

T PTFE Encapsulated Silicone O-Rings Y FDA Santoprene

**Construction Design** 

9 Bolted 0 Clamped

**Design Level** 

Α C

#### **Miscellaneous Options**

**B** BSP Tapered Thread **CP** Center Port **ATEX** ATEX Compliant FP Food Processing **SP** Sanitary Pump **HP** High Pressure **OE** Original Elima-Matic F Flap Valve

**HD** Horizontal Discharge 3A 3-A Certified **UL** UL Listed **OB** Oil Bottle

\*More than one option may be specified for a particular pump model.



### **Materials**

Material Profile:	Operating Temperatures:	
CAUTION! Operating temperature limitations are as follows:	Max.	Min.
Conductive Acetal: Tough, impact resistant, ductile. Good abrasion resistance and low friction surface. Generally inert, with good chemical resistance except for strong acids and oxidizing agents.	190°F 88°C	-20°F -29°C
<b>EPDM:</b> Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and alcohols.	280°F 138°C	-40°F -40°C
<b>FKM:</b> (Fluorocarbon) Shows good resistance to a wide range of oils and sovents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F) will attack FKM.	350°F 177°C	-40°F -40°C
Hytrel®: Good on acids, bases, amines and glycols at room temperatures only.	220°F 104°C	-20°F -29°C
Neoprene: All purpose. Resistance to vegetable oils. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic hydrocarbons.	200°F 93°C	-10°F -23°C
Nitrile: General purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated hydrocarbons and nitro hydrocarbons.	190°F 88°C	-10°F -23°C
<b>Nylon:</b> 6/6 High strength and toughness over a wide temperature range. Moderate to good resistance to fuels, oils and chemicals.	180°F 82°C	32°F 0°C

<b>Polypropylene:</b> A thermoplastic polymer. Moderate tensile and flex strength. Resists stong acids and alkali. Attacked by chlorine, fuming nitric acid and other strong oxidizing agents.	180°F 82°C	32°F 0°C
<b>PVDF:</b> (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance.	250°F 121°C	0°F -18°C
Santoprene®: Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance.	275°F 135°C	-40°F -40°C
<b>UHMW PE:</b> A thermoplastic that is highly resistant to a broad range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance.	180°F 82°C	-35°F -37°C
Urethane: Shows good resistance to abrasives. Has poor resistance to most solvents and oils.	150°F 66°C	32°F 0°C
Virgin PTFE: (PFA/TFE) Chemically inert, virtually impervious. Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures.	220°F 104°C	-35°F -37°C

Maximum and Minimum Temperatures are the limits for which these materials can be operated. Temperatures coupled with pressure affect the longevity of diaphragm pump components. Maximum life should not be expected at the extreme limits of the temperature ranges.

#### **Metals:**

Alloy C: Equal to ASTM494 CW-12M-1 specification for nickel and nickel alloy.

**Stainless Steel:** Equal to or exceeding ASTM specification A743 CF-8M for corrosion resistant iron chromium, iron chromium nickel and nickel based alloy castings for general applications. Commonly referred to as 316 Stainless Steel in the pump industry.


For specific applications, always consult the Chemical Resistance Chart.

**Note:** This document is a high level guide. Please be aware that not all model and or material combinations are possible for all sizes. Please consult factory or your distributor for specific details.

### **Performance**

# E2 - 2" Bolted Stainless Pump – Metal Center ELASTOMERIC AND TPE FITTED


Flow Rate Adjustable to 0-160 gpm (606 lpm)
Port Size
Suction 2" ANSI Flange (DIN Compatible)
Discharge 2" ANSI Flange (DIN Compatible)
<b>Air Inlet</b>
3/4" NPT (Stainless Steel Centers ONLY)
Air Exhaust 1" NPT
Suction Lift
Dry
Wet30' (9.1 m)
Max Solid Size (Diameter)
1/4" (6 mm)
Max Noise Level
Shipping Weights
Stainless
Cast Iron

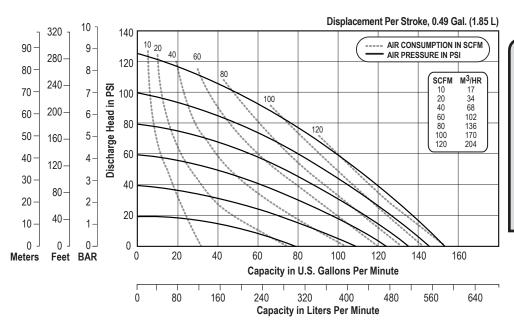

NOTE: Performance based on the following: elastomeric fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

# E2 - 2" Bolted Stainless Pump – Metal Center PTFE FITTED

Flow Rate
Adjustable to 0-157 gpm (594 lpm)
Port Size
Suction 2" ANSI Flange (DIN Compatible)
Discharge 2" ANSI Flange (DIN Compatible)
<b>Air Inlet</b>
3/4" NPT (Stainless Steel Centers ONLY)
Air Exhaust 1" NPT
Suction Lift
Dry
Wet
Max Solid Size (Diameter)
1/4" (6 mm)
Max Noise Level 100 dB(A)
Shipping Weights
Stainless
Cast Iron

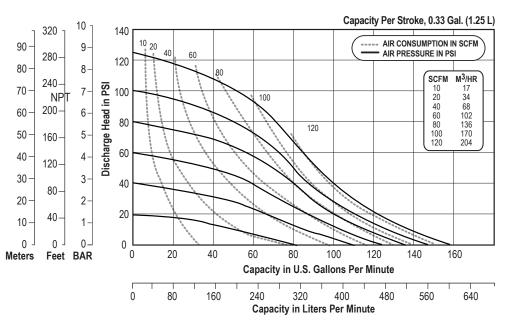

NOTE: Performance based on the following: PTFE fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.




Model E2 Bolted Metal • 6


# **Dimensional Drawings**

# **E2 Bolted Metal - Optional Horizontal Discharge** Dimensionally Interchangeable for Versamatic and Wilden

Dimensions in inches (mm dimensions in brackets)

The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.

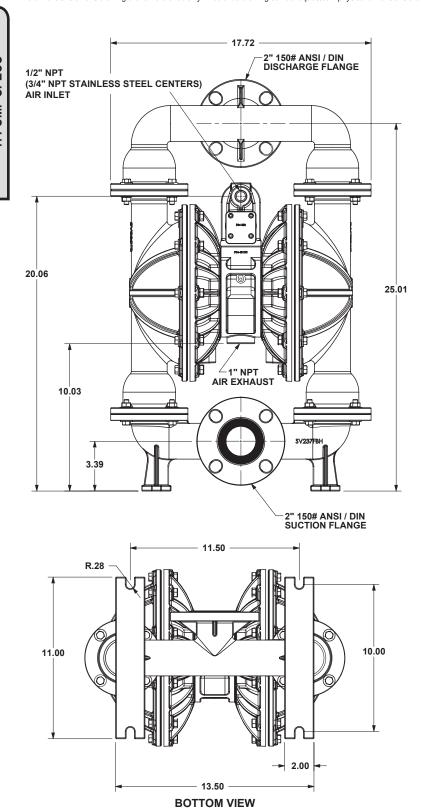

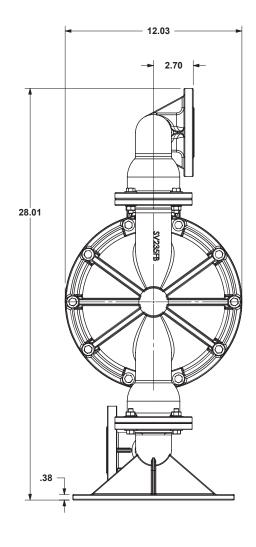




# **Dimensional Drawings**

### **E2** Bolted Metal

#### **Dimensionally Interchangeable with Versamatic Clamped Pump**

Dimensions in inches (mm dimensions in brackets)

The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.

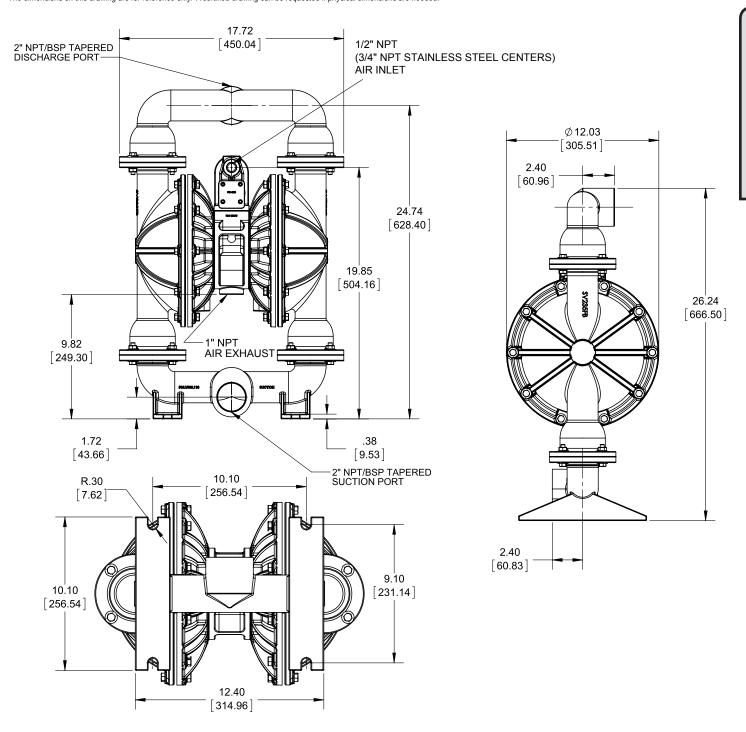


# **Dimensional Drawings**

### **E2** Bolted Metal


#### **Dimensionally Interchangeable with Wilden Clamped Pump**

Dimensions in inches (mm dimensions in brackets)

The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.

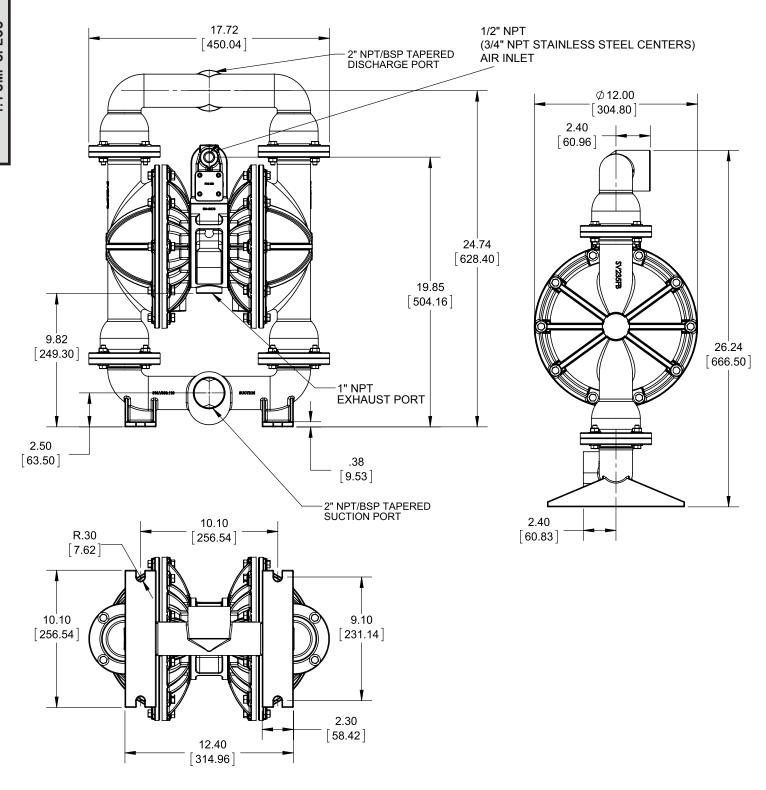

### **Principle of Pump Operation**

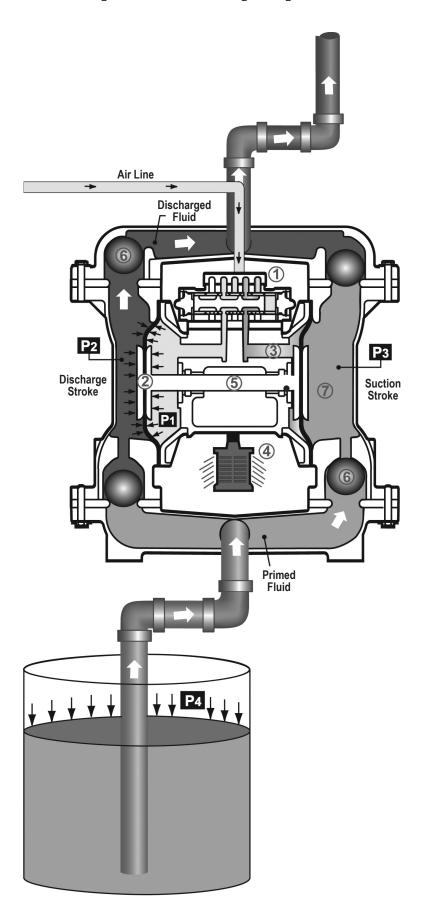

Air-Operated Double Diaphragm (AODD) pumps are powered by compressed air or nitrogen.


The main directional (air) control valve ① distributes compressed air to an air chamber, exerting uniform pressure over the inner surface of the diaphragm ②. At the same time, the exhausting air ③ from behind the opposite diaphragm is directed through the air valve assembly(s) to an exhaust port ④.

As inner chamber pressure (P1) exceeds liquid chamber pressure (P2), the rod ⑤ connected diaphragms shift together creating discharge on one side and suction on the opposite side. The discharged and primed liquid's directions are controlled by the check valves (ball or flap)⑥ orientation.

The pump primes as a result of the suction stroke. The suction stroke lowers the chamber pressure **(P3)** increasing the chamber volume. This results in a pressure differential necessary for atmospheric pressure **(P4)** to push the fluid through the suction piping and across the suction side check valve and into the outer fluid chamber T.

Suction (side) stroking also initiates the reciprocating (shifting, stroking or cycling) action of the pump. The suction diaphragm's movement is mechanically pulled through its stroke. The diaphragm's inner plate makes contact with an actuator plunger aligned to shift the pilot signaling valve. Once actuated, the pilot valve sends a pressure signal to the opposite end of the main directional air valve, redirecting the compressed air to the opposite inner chamber.

#### SUBMERGED ILLUSTRATION

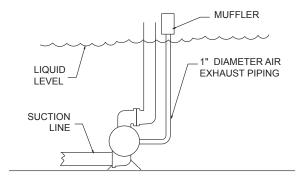

Pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills.



WWW.VERSAMATIC.COM Model E2 Bolted Metal • 10

### **Recommended Installation Guide**

#### **Available Accessories:** 1. Surge Suppressor Unregulated Air Supply to Surge 2. Filter/Regulator Surge Suppressor Suppressor 3. Air Dryer 4. Lubricator Pressure Gauge Shut-Off Valve Pipe Connection Note: Surge Suppressor and (Style Optional) Piping must be supported after Flexible Connector Discharge the flexible connection. Check Valve Shut-Off Drain Por Valve Muffler (Optional Piped Exhaust) Air Inlet Flexible Connector Vacuum Gauge Filter Regulator Air Dryer Suction **CAUTION** Shut-Off Valve The air exhaust should be piped to an area Drain Port for safe disposition of the product being pumped, in the event of a diaphragm failure.

#### Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

#### Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

#### Air Valve Lubrication

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is desired, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.

#### Air Line Moisture

Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.

#### **Air Inlet And Priming**

To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.

# **Troubleshooting Guide**

Symptom:	Potential Cause(s):	Recommendation(s):
Pump Cycles Once	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Air valve or intermediate gaskets installed incorrectly.	Install gaskets with holes properly aligned.
	Bent or missing actuator plunger.	Remove pilot valve and inspect actuator plungers.
Pump Will Not Operate	Pump is over lubricated.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
/ Cycle	Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. cfm required).
	Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.
	Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.
Pump Cycles and Will	Cavitation on suction side.	Check suction condition (move pump closer to product).
Not Prime or No Flow	Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.
	Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.
	Valve ball(s)/seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Pump Cycles Running	Over lubrication.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
Sluggish/Stalling,	Icing.	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.
Flow Unsatisfactory	Clogged manifolds.	Clean manifolds to allow proper air flow
Tiow official state of y	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Cavitation on suction side.	Check suction (move pump closer to product).
	Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.
	Undersized suction line.	Meet or exceed pump connections.
	Restrictive or undersized air line.	Install a larger air line and connection.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous.
Product Leaking	Diaphragm failure, or diaphragm plates loose.	Replace diaphragms, check for damage and ensure diaphragm plates are tight.
Through Exhaust	Diaphragm stretched around center hole or bolt holes.	Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
Premature Diaphragm	Cavitation.	Enlarge pipe diameter on suction side of pump.
Failure	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.
	Misapplication (chemical/physical incompatibility).	Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
	Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.
Unbalanced Cycling	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
, ,	Undersized suction line.	Meet or exceed pump connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Observations and the second se	Liver of the classic and code for consequence of the Double of the Code of the
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.


For additional troubleshooting tips contact After Sales Support at service.warrenrupp@idexcorp.com or 419-524-8388



WWW.VERSAMATIC.COM

Model E2 Bolted Metal • 12

# **Composite Repair Parts Drawing - Elastomeric and TPE Fitted**

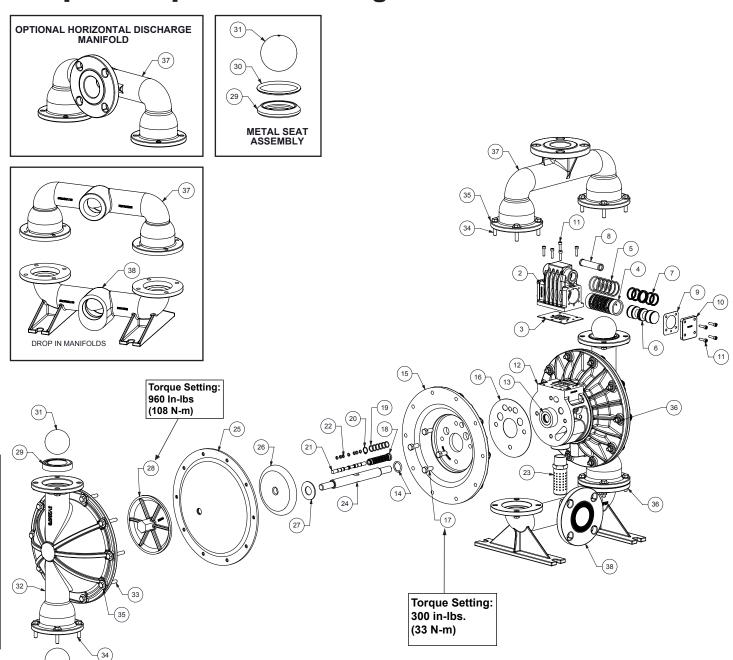

3: EXP VIEW

# **Composite Repair Parts List - Elastomeric and TPE Fitted**


		Air Valve Assemb	ly Part	Number
tem#	Qty.	Description	Aluminum	Number Stainless Steel
		Air Side Repair Kit (Includes Items		
		3,5,7,9,14,16,18-22)	4/0.0	019.000
1	1	Valve Body (includes items 2-11)	031.V002.156	031.V002.110
2	11	Valve Body	095.V001.156	095.V001.110
3	1	Valve Body Gasket		4-202
4	1	Valve Sleeve		006.148
5	6	O-ring Valve Spool Assembly (Includes items 7)	56U.)	206.360 7001.000
6	6	Valve Spool Assembly (Includes Items 7)  Glyde Ring Assembly	//5.V	1-204F
8	1	Air Valve Screen	P24-210	P34-210
9	2	End Cap Gasket		4-205
10	2	End Cap	P34-300	SP34-300
11	13	Mounting Screws (8 included on item 1)	S	1001
		Center Section Asse	mbly	
tem#	Qty.	Description		Number Ctainless Ctasl
12	1	Center Block Assembly (Includes item 13)	Aluminum P24-400DC ASY	Stainless Steel SP24-400
13	2	Bearing Sleeve		1-403
14	2	Main Shaft O-Ring		4-403
15	2	Air Chamber	196.V003.156	4-403 196.V003.110
16	2	Air Chamber Gasket	360 V	7001.360
17	8	Bolt	P24-110	SP24-110
		Pilot Repair Kit (Includes Items 18-22)		<u>1 0124 110</u> 018.000
18	1	Pilot Sleeve Assembly (include item 19)	755.√	002.000
19	6	O-ring	560.	101.358
20	1	Retaining Ring	675.0	037.080
21	1	Pilot Spool Assembly (Includes item 22)	775.V	002.000
22	8	O-ring	560.0	023.358
23	1	Muffler Dianhyayan Accombly (		033.000
		Diaphragm Assembly / E	astomers Part	Number
tem#	Qty.	Description	Stainless	Cast Iron
24	1	Main Shaft		4-103
25	2	Diaphragm (See Below Material Chart)		227xx
26	2	Inner Diaphragm Plate (See Note 1)	V226B, V226BNP	, V226BTC, SV226B
27	2	Bumper Washer		4-501
28	2	Outer Diaphragm Plate		B226
29	4	Valve Seat (See Below Material Chart)		240xx
30	4	Valve Seat O-Ring (See Below Material Chart) Valve Ball (See Below Material Chart)	See Vr	Note 4
31	4	Wet End Assemb		.4 IXX
tem#	Otv	Description	Part	Number
	Qty.	•	Stainless	Cast Iron
32	2	Water Chamber	SV235FB	WV235FB
33	20	Water Chamber Bolt		(187A
34	16	Manifold Bolt	SV	189D
35	36 36	Washer Nut		189C
36	30	Nut Discharge Manifold	SV236FB	(185B WV236FB
		Discharge Manifold (optional orientatiion)	SV236FB-H	WV236FB-H
37	1	Discharge Manifold (optional orientation)  Discharge Drop in Manifold	518.V007.110	
		Discharge Drop in Manifold (BSP)	518.V007.110 E	N/A
		Suction Manifold	SV237FB-H	WV237FB-H
		Suction Drop in Manifold	518.V006.110	N/A
38	1	Suction Drop in Manifold(BSP)	518.V006.110 E	N/A
JO 1			518.V006.110 W	N/A
30		Suction WD Drop in Manifold		
30		Suction WD Drop in Manifold Suction WD Drop in Manifold (BSP)	518.V006.110 WE	N/A
	terial	Suction WD Drop in Manifold (BSP)  Elastomer Material Spec	518.V006.110 WE ifications	N/A
Mat	terial	Suction WD Drop in Manifold (BSP)	518.V006.110 WE	
Mat Neo	terial prene trile	Suction WD Drop in Manifold (BSP)  Elastomer Material Spec  "Versa-Dome Diaphragm P/N"  V227N	518.V006.110 WE ifications "Ball P/N"	N/A Seat P/N V240N
Mat Neo Ni	prene trile	Suction WD Drop in Manifold (BSP)  Elastomer Material Spec  "Versa-Dome Diaphragm P/N"	518.V006.110 WE ifications "Ball P/N" V241N V241BN	N/A  Seat P/N  V240N  V240BN
Mat Neo Ni Fi	prene	Suction WD Drop in Manifold (BSP)  Elastomer Material Spec  "Versa-Dome Diaphragm P/N"  V227N  V227BN  V227VT  V227ND	518.V006.110 WE ifications "Ball P/N" V241N	N/A  Seat P/N  V240N  V240BN  V240VT  V240ND
Mat Neo Ni Fl	prene trile KM	Suction WD Drop in Manifold (BSP)  Elastomer Material Spec  "Versa-Dome Diaphragm P/N"  V227N  V227BN  V227VT  V227ND	518.V006.110 WE  fications  "Ball P/N"  V241N  V241BN  V241VT  V241ND  V241TF	N/A  Seat P/N  V240N  V240BN  V240VT  V240ND  V240TF
Mat Neo Ni FI EP	prene trile KM PDM	Suction WD Drop in Manifold (BSP)  Elastomer Material Spec  "Versa-Dome Diaphragm P/N"  V227N  V227BN  V227VT  V227VT  V227ND  N/A (see PTFE fitted page)  V227TPEXL	518.V006.110 WE  ifications  "Ball P/N"  V241N  V241BN  V241VT  V241ND  V241TF  V241TPEXL	N/A  Seat P/N  V240N  V240BN  V240VT  V240TPEXL
Mat Neo Ni FI EP PT Santo	prene trile KM PDM TFE	Suction WD Drop in Manifold (BSP)  Elastomer Material Spec  "Versa-Dome Diaphragm P/N"  V227N  V227BN  V227VT  V227ND  N/A (see PTFE fitted page)	518.V006.110 WE  fications  "Ball P/N"  V241N  V241BN  V241VT  V241ND  V241TF	N/A  Seat P/N  V240N  V240BN  V240VT  V240ND  V240TF
Mat Neo Ni FI EP PT Santo Hy Alun	prene trile KM PDM TFE oprene ytrel ninum	Suction WD Drop in Manifold (BSP)  Flastomer Material Spec  "Versa-Dome Diaphragm P/N"  V227N  V227BN  V227VT  V227ND  N/A (see PTFE fitted page)  V227TPEXL  V227TPEFG  N/A	518.V006.110 WE  ifications  "Ball P/N"  V241N  V241BN  V241VT  V241ND  V241TF  V241TPEFG  N/A	N/A  Seat P/N  V240N  V240BN  V240VT  V240ND  V240TF  V240TPEXL  V240TPEFG  V240A (See Note 2)
Mat Neo Ni FI EF P1 Santo Hy Alun Carbo	prene trile KM PDM TFE oprene ytrel ninum on Steel	Suction WD Drop in Manifold (BSP)  Elastomer Material Spec  "Versa-Dome Diaphragm P/N"  V227N  V227N  V227RD  V227VT  V227ND  N/A (see PTFE fitted page)  V227TPEXL  V227TPEFG  N/A  N/A	518.V006.110 WE  ifications  "Ball P/N"  V241N  V241BN  V241VT  V241ND  V241TF  V241TPEFG  N/A  N/A	N/A  Seat P/N  V240N  V240BN  V240VT  V240ND  V240TPEXL  V240TPEFG  V240A (See Note 2)  V240CS (See Note 2)
Mat Neo Ni FI EF P1 Santc Hy Alun Carbo Stainle	prene trile KM PDM TFE oprene ytrel ninum	Suction WD Drop in Manifold (BSP)  Flastomer Material Spec  "Versa-Dome Diaphragm P/N"  V227N  V227BN  V227VT  V227ND  N/A (see PTFE fitted page)  V227TPEXL  V227TPEFG  N/A	518.V006.110 WE  ifications  "Ball P/N"  V241N  V241BN  V241VT  V241ND  V241TF  V241TPEFG  N/A	N/A  Seat P/N  V240N  V240BN  V240VT  V240ND  V240TF  V240TPEXL  V240TPEFG  V240A (See Note 2)


### Notes:


- 1.) The inner diaphragm plate material is to match the air chamber material
- 2.) This Metal seat material is to match the water chamber material. In addition to this seat, (4) o-rings are needed. (Ref Note 4)
- 3.) These (4) o-rings are only used with Metal fitted seats.
- 4.) (4) V240T seat o-rings are used with Metal seats only.
- 5.) V=Aluminum, SV=Stainless Steel, WV=Cast Iron, H =Hastelloy, TC=PTFE Coated, NP=Nickel Plated





# **Composite Repair Parts Drawing - PTFE Fitted**

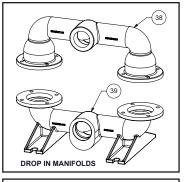


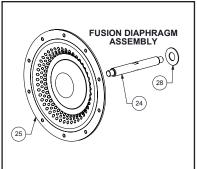

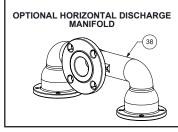



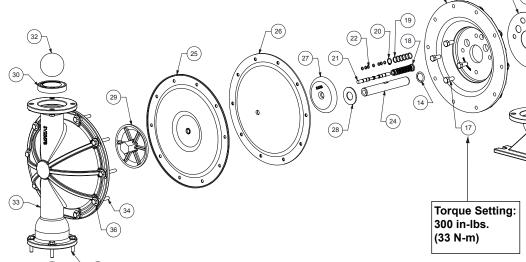

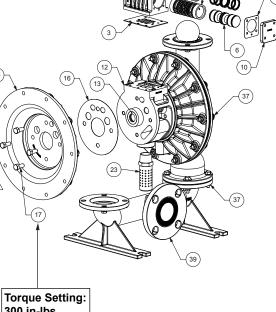

# **Composite Repair Parts List - PTFE Fitted**

		Air Valve Assembly			
Item #	Qty.	Description	Al	Part Number	0()
1011111	Q.I.J.	Air Side Repair Kit (Includes Items	Aluminum	Stainles	ss Steel
		3,5,7,9,14,16,18-22)		476.V019.000	
1	1	Valve Body (includes items 2-11)	031.V002.156	031.V0	02.110
2	1	Valve Body	095.V001.156	095.V0	01.110
3	1	Valve Body Gasket		P24-202	
4	1	Valve Sleeve		755.V006.148	
5 6	6	O-ring Valve Spool Assembly (Includes items 7)		560.206.360 775.V001.000	
7	6	Glyde Ring Assembly		P34-204F	
8	1	Air Valve Screen	P24-210	P34-	-210
9	2	End Cap Gasket	P24-205		
10	2	End Cap	P34-300 SP34-300		
11	13	Mounting Screws (8 included on item 1)		S1001	
		Center Section Assemb	ly	Dout Nambou	
Item #	Qty.	Description	Aluminum	Part Number Stainles	es Stool
12	1	Center Block Assembly (Includes item 13 & 14)	P24-400DC ASY	SP24	I-400
13	2	Bearing Sleeve	121 100007101	P31-403	100
14	2	Main Shaft O-Ring		P24-403	
15	2	Air Chamber	196.V003.156	196.V0	03.110
16	2	Air Chamber Gasket	D04 440	360.V001.360	1.440
17	8	Bolt Pilot Repair Kit (Includes Items 18-22)	P24-110	SP24 476.V018.000	H-TIU
18	1	Pilot Sleeve Assembly (include item 19)		755.V002.000	
19	6	O-ring		560.101.358	
20	1	Retaining Ring		675.037.080	
21	1	Pilot Spool Assembly (Includes item 22)		775.V002.000	
22	8	O-ring		560.023.358	
23	1	Muffler		530.033.000	
		Diaphragm Assembly / Elast	omers Part N	umber	
Item #	Qty.	Description	DTEE	ullibel	
	-	·	PTFE 2 Piece         Fusion           P24-102         P24-103		Fusion
24	1	Main Shaft	P24	-102	Fusion P24-103F
25	2	Main Shaft Diaphragm (See Below Material Chart)	P24 V22	-102 7TF	P24-103F V227F
25 26	2	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm	P24 V22 V227	-102 7TF 7TFB	P24-103F V227F N/A
25 26 27	2 2 2	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3)	P24 V22 V227	-102 7TF 7TFB te 6), V221TINP, V221TINP	P24-103F V227F
25 26 27 28	2 2 2 2*	Main Shaft  Diaphragm (See Below Material Chart)  Back Up Diaphragm  Inner Diaphragm Plate (Seee Note 3)  Bumper Washer	P24 V22 V227 V221TI, SV221TI* (See No	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6)	P24-103F V227F N/A N/A
25 26 27 28 29	2 2 2 2* 2*	Main Shaft  Diaphragm (See Below Material Chart)  Back Up Diaphragm  Inner Diaphragm Plate (Seee Note 3)  Bumper Washer  Outer Diaphragm Plate (See Note 4 Below)	P24 V22 V227	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6)	P24-103F V227F N/A
25 26 27 28 29 30	2 2 2 2*	Main Shaft  Diaphragm (See Below Material Chart)  Back Up Diaphragm  Inner Diaphragm Plate (Seee Note 3)  Bumper Washer  Outer Diaphragm Plate (See Note 4 Below)  Valve Seat (See Below Material Chart)	P24 V22 V227 V221TI, SV221TI* (See No	-102 7TF ?TFB te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx	P24-103F V227F N/A N/A
25 26 27 28 29	2 2 2 2* 2 4	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)	P24 V22 V227 V221TI, SV221TI* (See No	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6)	P24-103F V227F N/A N/A
25 26 27 28 29 30 31	2 2 2* 2* 2 4 4	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)	P24 V22 V227 V221TI, SV221TI* (See No	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx V240T V241xx	P24-103F V227F N/A N/A
25 26 27 28 29 30 31 32	2 2 2* 2* 2 4 4	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart) Wet End	P24 V22 V227 V221TI, SV221TI* (See No xV22 Assembly	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx V240T V241xx  Part Number	P24-103F V227F N/A N/A N/A
25 26 27 28 29 30 31 32	2 2 2 2* 2 4 4 4	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart) Wet End	P24 V22 V227 V221TI, SV221TI* (See No xV22 Assembly	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx V240T V241xx  Part Number Cast	P24-103F V227F N/A N/A N/A
25 26 27 28 29 30 31 32 <b>Item #</b>	2 2 2 2* 2 4 4 4 4 2 Qty.	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart) Wet End Description Water Chamber	P24 V22 V227 V221TI, SV221TI* (See No xV22 Assembly	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6) P1TO V240xx V240T V241xx  Part Number  Cast WV235FB	P24-103F V227F N/A N/A N/A
25 26 27 28 29 30 31 32 <b>Item #</b>	2 2 2 2* 2 4 4 4	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart) Wet End  Description Water Chamber Water Chamber Water Chamber Bolt	P24 V22 V227 V221TI, SV221TI* (See No xV22 Assembly	-102 7TF 7TF 2TF 105 106 107 107 107 107 107 107 107 107 107 107	P24-103F V227F N/A N/A N/A
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36	2 2 2 2* 2 4 4 4 4 Qty. 2 20 16 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description  Water Chamber Water Chamber Bolt Manifold Bolt Washer	P24 V22 V227 V221TI, SV221TI* (See No xV22 Assembly	-102 7TF 7TF te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx V240T V241xx  Part Number  WV235FB SV187A SV189D SV189C	P24-103F V227F N/A N/A N/A
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35	2 2 2 2* 2 4 4 4 4 Qty. 2 20 16	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut	P24 V22 V221 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV235FB	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx V240T V241xx  Part Number  WV235FB SV187A SV189D SV189C SV185B	P24-103F V227F N/A N/A N/A
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36	2 2 2 2* 2 4 4 4 4 Qty. 2 20 16 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold	P24 V22 V227 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV235FB  SV236FB	-102 7TF 7TF 105 106 107 107 108 108 109 109 109 109 109 109 109 109 109 109	P24-103F V227F N/A N/A N/A
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36	2 2 2 2* 2 4 4 4 4 Qty. 2 20 16 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart) Wet End  Description Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold	P24 V22 V227 V221TI, SV221TI* (See No xV22  XV22  XV22  XV22  Assembly  Stainless SV236FB SV236FB SV236FB-H	-102 7TF 7TF P24-501* (See Note 6) P24-501* (See Note 6) P24-501* (V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV236	P24-103F V227F N/A N/A N/A N/A
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2* 2 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description  Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold Discharge Manifold Discharge Drop in Manifold	P24 V22 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV236FB SV236FB SV236FB-H 518,V007,110	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV23 WV236 N/	P24-103F V227F N/A N/A N/A Iron
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2* 2 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart) Wet End  Description Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold	P24 V22 V221TI, SV221TI* (See No xV22  Stainless SV236FB SV236FB SV236FB-H 518.V007.110 518.V007.110 E	-102 7TF 7TF 2TF 2TF 2te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO  V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV236 WV236	P24-103F V227F N/A N/A N/A N/A
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2* 2 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description  Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold	P24 V22 V227 V221TI, SV221TI* (See No xV22  Stainless SV236FB SV236FB SV236FB-H 518.V007.110 518.V007.110 E SV237FB-H	-102 7TF 7TFB te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV23 WV236 N/	P24-103F V227F N/A N/A N/A N/A Iron
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2* 2 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description  Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold	P24 V22 V221TI, SV221TI* (See No xV22 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV236FB SV236FB SV236FB-H 518.V007.110 E SV237FB-H 518.V006.110 E 518.V006.110 E	-102 7TF 7TF 1TF 1te 6), V221TINP, V221TINP P24-501* (See Note 6) 11TO V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV23 WV236 N/ WV236 N/ WV236 N/ WV236 N/ N/ WV237 N/ WV237 N/ WV237 N/ WV237 N/	P24-103F V227F N/A N/A N/A N/A N/A N/A N/A N/A
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2 2* 4 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat (See Below Material Chart) Valve Seat (See Below Material Chart) Wet End  Description Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold	P24 V22 V221TI, SV221TI* (See No xV22 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV236FB SV236FB-H 518.V007.110 E SV237FB-H 518.V006.110 E 518.V006.110 W	-102 7TF 7TF 1te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV23 WV236 WV237	P24-103F
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2 2* 4 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart) Wet End  Description Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction WD Drop in Manifold (BSP)	P24 V22 V221TI, SV221TI* (See No xV22 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV236FB SV236FB-H 518.V007.110 E SV237FB-H 518.V006.110 E 518.V006.110 W 518.V006.110 W	-102 7TF 7TF 1TF 1te 6), V221TINP, V221TINP P24-501* (See Note 6) 11TO V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV23 WV236 N/ WV236 N/ WV236 N/ WV236 N/ N/ WV237 N/ WV237 N/ WV237 N/ WV237 N/	P24-103F
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2 2* 4 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description  Water Chamber Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction WD Drop in Manifold	P24 V22 V221TI, SV221TI* (See No xV22 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV236FB SV236FB-H 518.V007.110 E SV237FB-H 518.V006.110 E 518.V006.110 W 518.V006.110 W	-102 7TF 7TF 1TF 1E6), V221TINP, V221TINP P24-501* (See Note 6) 21TO V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV23 WV236 N/	P24-103F
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2 2* 4 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description  Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold (optional orientatiion) Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction WD Drop in Manifold (BSP) Elastomer Material Specific	P24 V22 V221TI, SV221TI* (See No xV22 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV236FB SV236FB-H 518.V007.110 E SV237FB-H 518.V006.110 E 518.V006.110 W 518.V006.110 W	-102 7TF 7TF 7TF 8 te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO  V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV236 WV236 WV236 N/ N/ WV23 N/ N/ WV23 N/ WY24 N/ WY25 N/	P24-103F
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2 2* 4 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description  Water Chamber Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold (optional orientatiion) Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction WD Drop in Manifold (BSP) Elastomer Material Specific Material PTFE	P24 V22 V221TI, SV221TI* (See No xV22 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV236FB SV236FB-H 518.V007.110 E SV237FB-H 518.V006.110 E 518.V006.110 W 518.V006.110 W	-102 7TF 7TF 7TF 2TF 2TF 2te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO  V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV23 WV236 WV236 N/ N/ WV237 N/ WV237 N/ WV241TF	P24-103F
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2 2* 4 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description  Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold (optional orientatiion) Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction WD Drop in Manifold (BSP) Elastomer Material Specific	P24 V22 V221TI, SV221TI* (See No xV22 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV236FB SV236FB-H 518.V007.110 E SV237FB-H 518.V006.110 E 518.V006.110 W 518.V006.110 W	-102 7TF 7TF 7TF 8 te 6), V221TINP, V221TINP P24-501* (See Note 6) 21TO  V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV236 WV236 WV236 N/ N/ WV23 N/ N/ WV23 N/ WY24 N/ WY25 N/	P24-103F
25 26 27 28 29 30 31 32 <b>Item #</b> 33 34 35 36 37	2 2 2 2 2* 4 4 4 4 4 2 20 16 36 36	Main Shaft Diaphragm (See Below Material Chart) Back Up Diaphragm Inner Diaphragm Plate (Seee Note 3) Bumper Washer Outer Diaphragm Plate (See Note 4 Below) Valve Seat (See Below Material Chart) Valve Seat O-Ring Valve Ball (See Below Material Chart)  Wet End  Description  Water Chamber Water Chamber Water Chamber Bolt Manifold Bolt Washer Nut Discharge Manifold Discharge Manifold (optional orientatiion) Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction WD Drop in Manifold (BSP) Elastomer Material Specific Material PTFE Aluminum	P24 V22 V221TI, SV221TI* (See No xV22 V221TI, SV221TI* (See No xV22  Assembly  Stainless SV236FB SV236FB-H 518.V007.110 E SV237FB-H 518.V006.110 E 518.V006.110 W 518.V006.110 W	-102 7TF 7TF 1TF 1E 6), V221TINP, V221TINP P24-501* (See Note 6) P24-501* (See Note 6) P24-501* (See Note 6) P24-501* (See Note 6) V240xx V240T V241xx  Part Number  Cast WV235FB SV187A SV189D SV189C SV185B WV236 WV236 N/ WV236 N/ WV237 N/ WV231 N/	P24-103F

#### Notes:

- 1.) These (4) o-rings are only used with Metal fitted seats.
- 2.) This Metal seat requires (4) V240T O-Rings.
- 3.) The inner diaphragm plate is to match the inner chamber material (Ref. Note 5)
- 4.) The outer diaphragm plate is to match the outer chamber material (Ref. Note 5)
- 5.) V = Aluminum, TC = PTFE Coated, NP = Nickel Plated, SV = Stainless Steel
- 6.) On pumps fitted with stainless steel center sections increase quantity to 4



## Material Codes - The Last 3 Digits of Part Number

- 000.....Assembly, sub-assembly; and some purchased items
- 010.....Cast Iron
- 015.....Ductile Iron
- 020.....Ferritic Malleable Iron
- 080.....Carbon Steel, AISI B-1112
- 110.....Alloy Type 316 Stainless Steel
- 111 .....Alloy Type 316 Stainless Steel (Electro Polished)
- 112.....Alloy C
- 113.....Alloy Type 316 Stainless Steel (Hand Polished)
- 114.....303 Stainless Steel
- 115.....302/304 Stainless Steel
- 117.....440-C Stainless Steel (Martensitic)
- 120.....416 Stainless Steel (Wrought Martensitic)
- 148.....Hardcoat Anodized Aluminum
- 150.....6061-T6 Aluminum
- 152.....2024-T4 Aluminum (2023-T351)
- 155.....356-T6 Aluminum
- 156.....356-T6 Aluminum
- 157.....Die Cast Aluminum Alloy #380
- 158.....Aluminum Alloy SR-319
- 162.....Brass, Yellow, Screw Machine Stock
- 165.....Cast Bronze, 85-5-5-5
- 166.....Bronze, SAE 660
- 170.....Bronze, Bearing Type, Oil Impregnated
- 180.....Copper Alloy
- 305.....Carbon Steel, Black Epoxy Coated
- 306.....Carbon Steel, Black PTFE Coated
- 307.....Aluminum, Black Epoxy Coated
- 308.....Stainless Steel, Black PTFE Coated
- 309.....Aluminum, Black PTFE Coated
- 313.....Aluminum, White Epoxy Coated
- 330.....Zinc Plated Steel
- 332.....Aluminum, Electroless Nickel Plated
- 333.....Carbon Steel, Electroless Nickel Plated
- 335.....Galvanized Steel
- 337.....Silver Plated Steel
- 351.....Food Grade Santoprene®
- 353.....Geolast; Color: Black
- 354..... Injection Molded #203-40
- Santoprene® Duro 40D +/-5; Color: RED
- 356.....Hytrel®
- 357.....Injection Molded Polyurethane
- 358.....Urethane Rubber (Some Applications) (Compression Mold)
- 359..... Urethane Rubber
- 360.....Nitrile Rubber Color coded: RED
- 363.....FKM (Fluorocarbon)
  Color coded: YELLOW

- 364.....EPDM Rubber
  - Color coded: BLUE
- 365.....Neoprene Rubber Color coded: GREEN
- 366.....Food Grade Nitrile
- 368.....Food Grade EPDM
- 371.....Philthane (Tuftane)
- 374.....Carboxylated Nitrile
- 375.....Fluorinated Nitrile
- 378.....High Density Polypropylene
- 379.....Conductive Nitrile
- 408.....Cork and Neoprene
- 425.....Compressed Fibre
- 426.....Blue Gard
- 440.....Vegetable Fibre
- 500.....Delrin® 500
- 502.....Conductive Acetal, ESD-800
- 503.....Conductive Acetal, Glass-Filled
- 506.....Delrin® 150
- 520.....Injection Molded PVDF Natural color
- 540.....Nylon
- 542.....Nylon
- 544.....Nylon Injection Molded
- 550.....Polyethylene
- 551.....Glass Filled Polypropylene
- 552.....Unfilled Polypropylene
- 555.....Polyvinyl Chloride
- 556.....Black Vinyl
- 558.....Conductive HDPE
- 570.....Rulon II®
- 580.....Ryton®
- 600.....PTFE (virgin material)
  Tetrafluorocarbon (TFE)
- 603.....Blue Gylon®
- 604.....PTFE
- 606.....PTFE
- 607.....Envelon
- 608.....Conductive PTFE
- 610.....PTFE Encapsulated Silicon
- 611.....PTFE Encapsulated FKM
- 632.....Neoprene/Hytrel®
- 633.....FKM/PTFE
- 634.....EPDM/PTFE
- 635.....Neoprene/PTFE
- 637.....PTFE, FKM/PTFE
- 638.....PTFE, Hytrel®/PTFE
- 639.....Nitrile/TFE
- 643.....Santoprene®/EPDM
- 644.....Santoprene®/PTFE
- 656.....Santoprene® Diaphragm and Check Balls/EPDM Seats
- 661.....EPDM/Santoprene®
- 666.....FDA Nitrile Diaphragm,
  - PTFE Overlay, Balls, and Seals
- 668.....PTFE, FDA Santoprene®/PTFE

- Delrin and Hytrel are registered tradenames of E.I. DuPont.
- Nylatron is a registered tradename of Polymer Corp.
- Gylon is a registered tradename of Garlock. Inc.
- Santoprene is a registered tradename of Exxon Mobil Corp.
- Rulon II is a registered tradename of Dixion Industries Corp.
- Ryton is a registered tradename of Phillips Chemical Co.
- Valox is a registered tradename of General Electric Co.

### RECYCLING

Warren Rupp, manufacturer of Versamatic, is an ISO14001 registered company and is committed to minimizing the impact our products have on the environment. Many components of Versamatic® AODD pumps are made of recyclable materials. We encourage pump users to recycle worn out parts and pumps whenever possible, after any hazardous pumped fluids are thoroughly flushed. Pump users that recycle will gain the satisfaction to know that their discarded part(s) or pump will not end up in a landfill. The recyclability of Versamatic products is a vital part of Warren Rupp's commitment to environmental stewardship.



## 5 - YEAR Limited Product Warranty

#### Quality System ISO9001 Certified • Environmental Management Systems ISO14001 Certified

Versamatic warrants to the original end-use purchaser that no product sold by Versamatic that bears a Versamatic brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Versamatic's factory.

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

~ See complete warranty at http://vm.salesmrc.com/pdfs/VM Product Warranty.pdf

#### **DECLARATION OF CONFORMITY**

DECLARATION DE CONFORMITE • DECLARACION DE CONFORMIDAD • ERKLÄRUNG BEZÜGLICH EINHALTUNG DER VORSCHRIFTEN DICHIARAZIONE DI CONFORMITÀ • CONFORMITEITSVERKLARING • DEKLARATION OM ÖVERENSSTÄMMELSE EF-OVERENSSTEMMELSESERKLÆRING • VAATIMUSTENMUKAISUUSVAKUUTUS • SAMSVARSERKLÄRING DECLARACAO DE CONFORMIDADE

#### **MANUFACTURED BY:**

FABRIQUE PAR:
FABRICADA POR:
HERGESTELLT VON:
FABBRICATO DA:
VERVAARDIGD DOOR:
TILLVERKAD AV:
FABRIKANT:
VALMISTAJA:
PRODUSENT:

FABRICANTE:

VERSAMATIC ®
Warren Rupp, Inc.
A Unit of IDEX Corporation
800 North Main Street
P.O. Box 1568

Mansfield, OH 44901-1568 USA

Tel: 419-526-7296 Fax: 419-526-7289



2006/42/EC

EN809:2012

to Annex VIII

on Machinery, according

# PUMP MODEL SERIES: E SERIES, V SERIES, VT SERIES, VSMA3, SPA15, RE SERIES AND U2 SERIES

#### This product complies with the following European Community Directives:

Ce produit est conforme aux directives de la Communauté européenne suivantes:

Este producto cumple con las siguientes Directrices de la Comunidad Europea:

Dieses produkt erfüllt die folgenden Vorschriften der Europäischen Gemeinschaft:

Questo prodotto è conforme alle seguenti direttive CEE:

Dir produkt voldoet aan de volgende EG-richtlijnen:

Denna produkt överensstämmer med följande EU direktiv:

Versamatic, Inc., erklærer herved som fabrikant, at ovennævnte produkt er i overensstemmelse med bestemmelserne i Direkktive:

Tämä tuote täyttää seuraavien EC Direktiivien vaatimukstet:

Dette produkt oppfyller kravene til følgende EC Direktiver:

Este produto está de acordo com as seguintes Directivas comunitárias:

#### This product has used the following harmonized standards to verify conformance:

Ce materiel est fabriqué selon les normes harmonisées suivantes, afin d'en garantir la conformité:

Este producto cumple con las siquientes directrices de la comunidad europa:

Dieses produkt ist nach folgenden harmonisierten standards gefertigtworden, die übereinstimmung wird bestätigt:

Questo prodotto ha utilizzato i seguenti standards per verificare la conformita':

De volgende geharmoniseerde normen werden gehanteerd om de conformiteit van dit produkt te garanderen:

För denna produkt har följande harmoniserande standarder använts för att bekräfta överensstämmelse:

Harmoniserede standarder, der er benyttet:

Tässä tuotteessa on sovellettu seuraavia yhdenmukaistettuja standardeja:

 $\label{thm:product} \mbox{ Dette produkt er produsert i overenstemmelse med fløgende harmoniserte standarder:}$ 

Este produto utilizou os seguintes padrões harmonizados para varificar conformidade:

#### **AUTHORIZED/APPROVED BY:**

Approuve par:
Aprobado por:
Genehmigt von:
approvato da:
Goedgekeurd door:
Underskrift:
Valtuutettuna:
Bemyndiget av:
Autorizado Por:

Dave Roseberry
Director of Engineering

Authorized Representative: IDEX Pump Technologies R79 Shannon Industrial Estate, Shannon, Co. Clare Ireland

Attn: Barry McMahon

DATE: February 27, 2017

FECHA: DATUM: DATA: DATO: PÄIVÄYS:

CE

06/14/2017 REV 08

WWW. VERSAMATIC. COM Model E2 Bolted Metal • 18

# **EU Declaration of Conformity**

#### Manufacturer:

Versamatic A Unit of IDEX Corporation 800 North Main Street Mansfield, OH 44902 USA



Warren Rupp, Inc declares that Air Operated Double Diaphragm Pumps (AODD) and Surge Suppressors listed below comply with the requirements of **Directive 2014/34/EU** and all the applicable standards.

#### **Applicable Standards:**

- EN ISO 80079-36: 2016
- EN ISO 80079-37: 2016
- EN60079-25: 2010
- 1. AODD Pumps and Surge Suppressors Technical File No.: 20310400 -1410/MER

Hazardous Location Applied:

II 2 G Ex h IIC T5...225°C (T2) Gb II 2 D Ex h IIIC T100°C...T200°C Db

- Metal pump models with external aluminum components (E-series)
- Versa-Surge<sup>®</sup> surge suppressors (VTA-Series)
- 2. AODD Pumps Technical File No.: 20310400 -1410/MER On File With: DEKRA Certification B.V. (0344)

Meander 1051 6825 MJ Arnhem The Netherlands

Hazardous Location Applied:



I M2 Ex h Mb ⟨Ex⟩ II 2 G Ex h IIC T5...225°C (T2) Gb II 2 D Ex h IIIC T100°C...T200°C Db

- Metal pump models with no external aluminum (E-Series)
- Conductive plastic pumps (E-Series Plastic)
- See "Safety Information" page for conditions of safe use

DATE/OF REVISION/TITLE: 19 DEC 2018



Dave Roseberry Director of Engineering

